

Samsung Galaxy smartphones supporting My Knox	
Galaxy A9 (2016), A8, A7 (2016), A7, A5 (2016), A5, A3 (2016), A3	Availability of My Knox may vary depending on your region, mobile service provider, etc.
Galaxy Alpha	
Galaxy E7, E5	
Galaxy Folder	
Galaxy J7, J5 (2016), J5, J3 (2016), J	
Galaxy Note 5, Note 4, Note 3, Note 3 Neo, Note Edge	
Galaxy On7	
Galaxy S7, S7 edge	
Galaxy S6, S6 active, S6 edge, S6 edge+	
Galaxy S5, S5 Active, S5 LTE-A, S5 mini, S5 Neo, S5 Sport	
Galaxy S4	
Galaxy Xcover 3	
心系天下 W2016 (SM-G9198)	
领世旗舰3 (SM-W2016)	
Galaxy Note 10.1 (2014 edition)	
Galaxy Tab 4, Tab A (8.0, 9.7, 10.1), Tab Active, Tab E (8.0), Tab S2 (8.0, 9.7)	

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy A9	SM-A9000	Knox 2.6
	SM-A9100	Knox 2.6
	SM-A910F	Knox 2.6
Galaxy A8	SM-A8000	Knox 2.6
	SM-A800F	Knox 2.6
	SM-A800I	Knox 2.6
	SM-A800J	Knox 2.6
	SM-A800S	Knox 2.6
	SM-A800YZ	Knox 2.6
	SM-A810F	Knox 2.7
	SM-A810S	Knox 2.7
	SM-A810YZ	Knox 2.7
Galaxy A7	SM-A7000	Knox 2.4.x or earlier
	SM-A7009	Knox 2.4.x or earlier
	SM-A700F	Knox 2.6
	SM-A700FD	Knox 2.6
	SM-A700H	Knox 2.6
	SM-A700K	Knox 2.6
	SM-A700L	Knox 2.6
	SM-A700S	Knox 2.6
	SM-A700YD	Knox 2.4.x or earlier
	SM-A7100	Knox 2.6
	SM-A710F	Knox 2.8
	SM-A710K	Knox 2.8
	SM-A710L	Knox 2.8
	SM-A710M	Knox 2.8
	SM-A710S	Knox 2.8
	SM-A720F	Knox 2.7

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy A5	SM-A5000	Knox 2.4.x or earlier
	SM-A5009W	Knox 2.4.x or earlier
	SM-A500F	Knox 2.6
	SM-A500F1	Knox 2.6
	SM-A500FU	Knox 2.6
	SM-A500H	Knox 2.6
	SM-A500K	Knox 2.6
	SM-A500L	Knox 2.6
	SM-A500M	Knox 2.6
	SM-A500S	Knox 2.6
	SM-A500XZ	Knox 2.4.x or earlier
	SM-A500Y	Knox 2.6
	SM-A5100	Knox 2.6
	SM-A510F	Knox 2.8
	SM-A510FD	Knox 2.8
	SM-A510K	Knox 2.8
	SM-A510L	Knox 2.6
	SM-A510M	Knox 2.8
	SM-A510S	Knox 2.6
	SM-A520F	Knox 2.7
	SM-A520K	Knox 2.7
	SM-A520L	Knox 2.7
	SM-A520S	Knox 2.7
	SM-A520W	Knox 2.7
Galaxy A3	SM-A3000	Knox 2.4.x or earlier
	SM-A3009	Knox 2.4.x or earlier
	SM-A300F	Knox 2.4.x or earlier
	SM-A300FU	Knox 2.6
	SM-A300H	Knox 2.4.x or earlier
	SM-A300M	Knox 2.4.x or earlier
	SM-A300XZ	Knox 2.4.x or earlier
	SM-A300Y	Knox 2.6
	SM-A300YZ	Knox 2.4.x or earlier
	SM-A310D	Knox 2.8
	SM-A310F	Knox 2.8
	SM-A310M	Knox 2.8
	SM-A310N0	Knox 2.8
	SM-A320F	Knox 2.7
	SM-A320Y	Knox 2.7
Galaxy Ace Style	SM-G357FZ	Knox 2.4.x or earlier
Galaxy Alpha	SM-G850A	Knox 2.4.x or earlier
	SM-G850F	Knox 2.4.x or earlier
	SM-G850K	Knox 2.4.x or earlier
	SM-G850L	Knox 2.4.x or earlier
	SM-G850S	Knox 2.4.x or earlier
	SM-G850W	Knox 2.4.x or earlier
	SM-G850X	Knox 2.4.x or earlier

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy C9 / C9 Pro	SM-C9000	Knox 2.7
Galaxy C7 / C7 Pro	SM-C7000	Knox 2.6
	SM-C7010	Knox 2.7
	SM-C7018	Knox 2.7
Galaxy C5 / C5 Pro	SM-C5000	Knox 2.6
	SM-C5010	Knox 2.7
Galaxy Core Max	SM-G5108	Knox 2.4.x or earlier
	SM-G5108Q	Knox 2.4.x or earlier
	SM-G5109	Knox 2.4.x or earlier
Galaxy Core Prime	SM-G360BT	Knox 2.4.x or earlier
	SM-G360F	Knox 2.4.x or earlier
	SM-G360FY	Knox 2.4.x or earlier
	SM-G360G	Knox 2.4.x or earlier
	SM-G360GY	Knox 2.4.x or earlier
	SM-G360M	Knox 2.4.x or earlier
	SM-G361F	Knox 2.4.x or earlier
Galaxy Core Prime Value Edition	SM-G361F	Knox 2.4.x or earlier
Galaxy E7	SM-E700F	Knox 2.4.x or earlier
	SM-E700H	Knox 2.4.x or earlier
Galaxy E5	SM-E500F	Knox 2.4.x or earlier
	SM-E500H	Knox 2.4.x or earlier
Galaxy Express 2	SM-G3815	Knox 2.4.x or earlier
Galaxy Folder	SM-G150N0	Knox 2.4.x or earlier
	SM-G150NK	Knox 2.4.x or earlier
	SM-G150NL	Knox 2.4.x or earlier
	SM-G150NS	Knox 2.4.x or earlier
	SM-G155S	Knox 2.4.x or earlier
	SM-G1600	Knox 2.6
	SM-G160N	Knox 2.6
	SM-G165N	Knox 2.6
	SM-G9198	Knox 2.4.x or earlier
Galaxy Golden	SM-W2015	Knox 2.4.x or earlier
	SM-W2016	Knox 2.4.x or earlier
	SM-W2017	Knox 2.7
Galaxy Grand 2	SM-G7102	Knox 2.4.x or earlier
	SM-G7105	Knox 2.4.x or earlier
	SM-G7105L	Knox 2.4.x or earlier
	SM-G7109	Knox 2.4.x or earlier
	SM-G710K	Knox 2.4.x or earlier
	SM-G710L	Knox 2.4.x or earlier
	SM-G710S	Knox 2.4.x or earlier
Galaxy Grand Prime Plus	SM-G532F	Knox 2.7
	SM-G532G	Knox 2.7
	SM-G532M	Knox 2.7

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy Grand Prime	SM-G5306W	Knox 2.4.x or earlier
	SM-G5308W	Knox 2.4.x or earlier
	SM-G5309W	Knox 2.4.x or earlier
	SM-G530F	Knox 2.4.x or earlier
	SM-G530FZ	Knox 2.4.x or earlier
	SM-G530H	Knox 2.4.x or earlier
	SM-G530P	Knox 2.4.x or earlier
	SM-G530R4	Knox 2.4.x or earlier
	SM-G530R7	Knox 2.4.x or earlier
	SM-G530T	Knox 2.4.x or earlier
	SM-G530T1	Knox 2.4.x or earlier
	SM-G530W	Knox 2.4.x or earlier
	SM-G530Y	Knox 2.4.x or earlier
Galaxy Grand Prime Value Edition	SM-G531F	Knox 2.4.x or earlier
	SM-G531M	Knox 2.4.x or earlier
	SM-G531Y	Knox 2.4.x or earlier
Galaxy J	SGH-N075T	Knox 2.4.x or earlier
Galaxy J7	SM-J7008	Knox 2.4.x or earlier
	SM-J700F	Knox 2.6
	SM-J700H	Knox 2.6
	SM-J700K	Knox 2.4.x or earlier
	SM-J700M	Knox 2.6
	SM-J700P	Knox 2.6
	SM-J700T	Knox 2.6
	SM-J700T1	Knox 2.6
	SM-J7108	Knox 2.5.1
	SM-J7109	Knox 2.5.1
	SM-J710FN	Knox 2.6
	SM-J710GN	Knox 2.6
	SM-J710K	Knox 2.6
	SM-J710MN	Knox 2.6
	SM-J727A	Knox 2.8
	SM-J727P	Knox 2.7.1
	SM-J727R4	Knox 2.7.1
	SM-J727S	Knox 2.8
	SM-J727T	Knox 2.8
	SM-J727V	Knox 2.7.1
	SM-J727VL	Knox 2.7
	SM-J730F	Knox 2.8
	SM-J730FM	Knox 2.8
Galaxy J7 Max	SM-G615F	Knox 2.8
	SM-G615FU	Knox 2.8

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy J5	SM-J5008	Knox 2.4.x or earlier
	SM-J500F	Knox 2.4.x or earlier
	SM-J500FN	Knox 2.6
	SM-J500H	Knox 2.6
	SM-J500M	Knox 2.4.x or earlier
	SM-J500N0	Knox 2.4.x or earlier
	SM-J500Y	Knox 2.6
	SM-J5108	Knox 2.6
	SM-J510FN	Knox 2.6
	SM-J510GN	Knox 2.6
	SM-J510H	Knox 2.6
	SM-J510K	Knox 2.6
	SM-J510L	Knox 2.6
	SM-J510MN	Knox 2.6
	SM-J510S	Knox 2.6
	SM-J510UN	Knox 2.6
	SM-J530F	Knox 2.8
	SM-J530FM	Knox 2.8
	SM-J530K	Knox 2.8
	SM-J530L	Knox 2.8
	SM-J530S	Knox 2.8
Galaxy J3	SM-J3109	Knox 2.5.1
	SM-J3110	Knox 2.5.1
	SM-J3119	Knox 2.5.1
	SM-J3119S	Knox 2.5.1
	SM-J320A	Knox 2.6
	SM-J320AZ	Knox 2.6
	SM-J320N0	Knox 2.6
	SM-J320P	Knox 2.5.1
	SM-J320R4	Knox 2.6
	SM-J320V	Knox 2.6
	SM-J320VPP	Knox 2.6
	SM-J320Y	Knox 2.5.1
	SM-J320YZ	Knox 2.5.1
	SM-J320ZN	Knox 2.5.1
	SM-J321AZ	Knox 2.6
	SM-J326AZ	Knox 2.7.1
	SM-J327A	Knox 2.7.1
	SM-J327AZ	Knox 2.7.1
	SM-J327P	Knox 2.7
	SM-J327R4	Knox 2.8
	SM-J327T	Knox 2.7.1
	SM-J327T1	Knox 2.7.1
	SM-J327U	Knox 2.7.1
	SM-J327V	Knox 2.8
	SM-J327VPP	Knox 2.8
	SM-J330F	Knox 2.8
	SM-S320VL	Knox 2.6
	SM-S327VL	Knox 2.7
	SM-S337TL	Knox 2.7.1

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy J2	SM-J200BT	Knox 2.4.x or earlier
	SM-J200F	Knox 2.4.x or earlier
	SM-J200G	Knox 2.4.x or earlier
	SM-J200GU	Knox 2.4.x or earlier
	SM-J200M	Knox 2.4.x or earlier
Galaxy J1	SM-J120A	Knox 2.6
	SM-J120AZ	Knox 2.6
	SM-J120F	Knox 2.5.1
	SM-J120FN	Knox 2.5.1
	SM-J120G	Knox 2.5.1
	SM-J120M	Knox 2.5.1
	SM-J120W	Knox 2.6
	SM-J120ZN	Knox 2.5.1
	SM-S120VL	Knox 2.6
Galaxy Mega 6.3	GT-I9200	Knox 2.4.x or earlier
	GT-I9205	Knox 2.4.x or earlier
	GT-I9208	Knox 2.4.x or earlier
	SCH-R960	Knox 2.4.x or earlier
	SGH-I527	Knox 2.4.x or earlier
	SGH-I527M	Knox 2.4.x or earlier
	SHV-E310K	Knox 2.4.x or earlier
	SHV-E310L	Knox 2.4.x or earlier
	SHV-E310S	Knox 2.4.x or earlier
	SPH-L600	Knox 2.4.x or earlier
Galaxy Mega 2	SM-G7508Q	Knox 2.4.x or earlier
	SM-G750A	Knox 2.4.x or earlier
	SM-G750F	Knox 2.4.x or earlier
	SM-G750H	Knox 2.4.x or earlier
Galaxy Note 5	SM-N9200	Knox 2.7.1
	SM-N9208	Knox 2.7.1
	SM-N920A	Knox 2.7.1
	SM-N920C	Knox 2.7.1
	SM-N920K	Knox 2.7.1
	SM-N920L	Knox 2.7.1
	SM-N920P	Knox 2.7.1
	SM-N920R4	Knox 2.6
	SM-N920S	Knox 2.7.1
	SM-N920T	Knox 2.7.1
	SM-N920V	Knox 2.7.1

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy Note 4	SM-N910A	Knox 2.6
	SM-N910C	Knox 2.6
	SM-N910CQ	Knox 2.6
	SM-N910F	Knox 2.6
	SM-N910G	Knox 2.6
	SM-N910H	Knox 2.6
	SM-N910K	Knox 2.6
	SM-N910L	Knox 2.6
	SM-N910P	Knox 2.6
	SM-N910R4	Knox 2.6
	SM-N910S	Knox 2.6
	SM-N910T	Knox 2.6
	SM-N910T2	Knox 2.4.x or earlier
	SM-N910T3	Knox 2.6
	SM-N910U	Knox 2.6
	SM-N910V	Knox 2.6
	SM-N910W8	Knox 2.6
Galaxy Note 4 S-LTE	SM-N916K	Knox 2.6
	SM-N916L	Knox 2.6
	SM-N916S	Knox 2.6
Galaxy Note 3	SM-N900	Knox 2.4.x or earlier
	SM-N900S	Knox 2.4.x or earlier
	SM-N9008	Knox 2.4.x or earlier
	SM-N9008V	Knox 2.4.x or earlier
	SM-N900A	Knox 2.4.x or earlier
	SM-N900J	Knox 2.4.x or earlier
	SM-N900K	Knox 2.4.x or earlier
	SM-N900L	Knox 2.4.x or earlier
	SM-N900P	Knox 2.4.x or earlier
	SM-N900R4	Knox 2.4.x or earlier
	SM-N900S	Knox 2.4.x or earlier
	SM-N900T	Knox 2.4.x or earlier
	SM-N900V	Knox 2.4.x or earlier
	SM-N900W8	Knox 2.4.x or earlier
Galaxy Note 3 Neo	SM-N750	Knox 2.4.x or earlier
	SM-N7502	Knox 2.4.x or earlier
	SM-N750S	Knox 2.4.x or earlier
	SM-N7508V	Knox 2.4.x or earlier
	SM-N750K	Knox 2.4.x or earlier
	SM-N750L	Knox 2.4.x or earlier
	SM-N750S	Knox 2.4.x or earlier

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy Note 2	GT-N7100	Knox 2.4.x or earlier
	GT-N7105	Knox 2.4.x or earlier
	SCH-I605	Knox 2.4.x or earlier
	SCH-R950	Knox 2.4.x or earlier
	SGH-I317	Knox 2.4.x or earlier
	SGH-I317M	Knox 2.4.x or earlier
	SGH-T889	Knox 2.4.x or earlier
	SGH-T889V	Knox 2.4.x or earlier
	SHV-E250K	Knox 2.4.x or earlier
	SHV-E250L	Knox 2.4.x or earlier
	SHV-E250S	Knox 2.4.x or earlier
	SPH-L900	Knox 2.4.x or earlier
Galaxy Note Edge	SM-N915A	Knox 2.6
	SM-N915D	Knox 2.6
	SM-N915F	Knox 2.6
	SM-N915FY	Knox 2.6
	SM-N915G	Knox 2.6
	SM-N915J	Knox 2.6
	SM-N915K	Knox 2.6
	SM-N915L	Knox 2.6
	SM-N915P	Knox 2.6
	SM-N915R4	Knox 2.6
	SM-N915S	Knox 2.6
	SM-N915T	Knox 2.6
	SM-N915V	Knox 2.6
	SM-N915W8	Knox 2.6
	SM-N915X	Knox 2.4.x or earlier
Galaxy On7	SM-G600F	Knox 2.6
	SM-G600S	Knox 2.6
	SM-G6100	Knox 2.6
	SM-G610F	Knox 2.6
	SM-G610K	Knox 2.6
	SM-G610L	Knox 2.6
	SM-G610S	Knox 2.6
Galaxy On5	SM-G550T	Knox 2.6
	SM-G550T1	Knox 2.6
	SM-G550T2	Knox 2.6
	SM-G5510	Knox 2.6
	SM-G5520	Knox 2.6
	SM-G5528	Knox 2.6
	SM-G5700	Knox 2.6
	SM-G570F	Knox 2.6
	SM-S550TL	Knox 2.6
Galaxy Round	SM-G910S	Knox 2.4.x or earlier

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy S8	SM-G950F	Knox 2.8
	SM-G950U	Knox 2.8
	SM-G950U1	Knox 2.8
	SM-G950W	Knox 2.8
	SM-G9500	Knox 2.8
Galaxy S8+	SM-G955F	Knox 2.8
	SM-G955U	Knox 2.8
	SM-G955U1	Knox 2.8
	SM-G955W	Knox 2.8
	SM-G9550	Knox 2.8
Galaxy S7	SM-G9300	Knox 2.7.1
	SM-G930A	Knox 2.7.1
	SM-G930F	Knox 2.7.1
	SM-G930K	Knox 2.7.1
	SM-G930L	Knox 2.7.1
	SM-G930P	Knox 2.7.1
	SM-G930R4	Knox 2.7.1
	SM-G930S	Knox 2.7.1
	SM-G930T	Knox 2.7.1
	SM-G930U	Knox 2.7.1
	SM-G930V	Knox 2.7.1
	SM-G930W8	Knox 2.7.1
Galaxy S7 Active	SM-G891A	Knox 2.7.1
Galaxy S7 edge	SM-G9350	Knox 2.7.1
	SM-G935A	Knox 2.7.1
	SM-G935F	Knox 2.7.1
	SM-G935K	Knox 2.7.1
	SM-G935L	Knox 2.7.1
	SM-G935P	Knox 2.7.1
	SM-G935R4	Knox 2.7.1
	SM-G935S	Knox 2.7.1
	SM-G935T	Knox 2.7.1
	SM-G935U	Knox 2.7.1
	SM-G935V	Knox 2.7.1
	SM-G935W8	Knox 2.7.1
Galaxy S6	SM-G9200	Knox 2.6
	SM-G9208	Knox 2.6
	SM-G9209	Knox 2.6
	SM-G920A	Knox 2.7.1
	SM-G920F	Knox 2.7.1
	SM-G920FD	Knox 2.7.1
	SM-G920I	Knox 2.7.1
	SM-G920K	Knox 2.7.1
	SM-G920L	Knox 2.7.1
	SM-G920P	Knox 2.7.1
	SM-G920R4	Knox 2.7.1
	SM-G920S	Knox 2.7.1
	SM-G920T	Knox 2.7.1
	SM-G920T1	Knox 2.7.1
	SM-G920V	Knox 2.7.1
	SM-G920W8	Knox 2.7.1
	SM-S906L	Knox 2.4.x or earlier

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy S6 active	SM-G890A	Knox 2.7.1
Galaxy S6 edge	SM-G9250	Knox 2.6
	SM-G925A	Knox 2.7.1
	SM-G925F	Knox 2.7.1
	SM-G925K	Knox 2.7.1
	SM-G925L	Knox 2.7.1
	SM-G925P	Knox 2.7.1
	SM-G925R4	Knox 2.7.1
	SM-G925S	Knox 2.7.1
	SM-G925T	Knox 2.7.1
	SM-G925V	Knox 2.7.1
	SM-G925W8	Knox 2.7.1
	SM-G9280	Knox 2.6
Galaxy S6 edge+	SM-G9287	Knox 2.7.1
	SM-G928A	Knox 2.7.1
	SM-G928F	Knox 2.7.1
	SM-G928K	Knox 2.7.1
	SM-G928L	Knox 2.7.1
	SM-G928N0	Knox 2.6
	SM-G928P	Knox 2.7.1
	SM-G928R4	Knox 2.6
	SM-G928S	Knox 2.7.1
	SM-G928T	Knox 2.7.1
	SM-G928V	Knox 2.7.1
	SM-G9008V	Knox 2.6
Galaxy S5	SM-G9008W	Knox 2.6
	SM-G900A	Knox 2.6
	SM-G900D	Knox 2.6
	SM-G900F	Knox 2.6
	SM-G900FD	Knox 2.6
	SM-G900H	Knox 2.6
	SM-G900J	Knox 2.6
	SM-G900K	Knox 2.6
	SM-G900L	Knox 2.6
	SM-G900P	Knox 2.6
	SM-G900R4	Knox 2.6
	SM-G900S	Knox 2.6
	SM-G900T	Knox 2.6
	SM-G900T1	Knox 2.6
	SM-G900T3	Knox 2.6
	SM-G900V	Knox 2.6
	SM-G900W8	Knox 2.6
	SM-S902L	Knox 2.4.x or earlier
	SM-G901F	Knox 2.6
	SM-G906K	Knox 2.6
Galaxy S5 LTE-A	SM-G906L	Knox 2.6
	SM-G906S	Knox 2.6

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy S5 Active	SM-G870A	Knox 2.6
	SM-G870D	Knox 2.6
	SM-G870F	Knox 2.4.x or earlier
	SM-G870F0	Knox 2.4.x or earlier
	SM-G870W	Knox 2.6
Galaxy S5 mini	SM-G800A	Knox 2.4.x or earlier
	SM-G800F	Knox 2.6
	SM-G800H	Knox 2.6
	SM-G800R4	Knox 2.4.x or earlier
Galaxy S5 Neo	SM-G903F	Knox 2.6
	SM-G903W	Knox 2.6
Galaxy S5 Sport	SM-G860P	Knox 2.6
Galaxy S4	GT-I9500	Knox 2.4.x or earlier
	GT-I9505	Knox 2.4.x or earlier
	GT-I9506	Knox 2.4.x or earlier
	GT-I9507	Knox 2.4.x or earlier
	GT-I9508	Knox 2.4.x or earlier
	GT-I9508V	Knox 2.4.x or earlier
	SCH-I545	Knox 2.4.x or earlier
	SCH-I545L	Knox 2.4.x or earlier
	SCH-I545PP	Knox 2.4.x or earlier
	SCH-R970	Knox 2.4.x or earlier
	SCH-R970C	Knox 2.4.x or earlier
	SCH-R970X	Knox 2.4.x or earlier
	SGH-I337	Knox 2.4.x or earlier
	SGH-I337M	Knox 2.4.x or earlier
	SGH-I337Z	Knox 2.4.x or earlier
	SGH-M919	Knox 2.4.x or earlier
	SGH-M919N	Knox 2.4.x or earlier
	SGH-M919V	Knox 2.4.x or earlier
	SHV-E300K	Knox 2.4.x or earlier
	SHV-E300L	Knox 2.4.x or earlier
	SHV-E300S	Knox 2.4.x or earlier
	SPH-L720	Knox 2.4.x or earlier
	SPH-L720T	Knox 2.4.x or earlier
Galaxy S4 Active	SGH-I537	Knox 2.4.x or earlier
Galaxy S4 LTE-A	SHV-E330K	Knox 2.4.x or earlier
	SHV-E330L	Knox 2.4.x or earlier
	SHV-E330S	Knox 2.4.x or earlier
Galaxy S4 mini	GT-I9190	Knox 2.4.x or earlier
	GT-I9192	Knox 2.4.x or earlier
	GT-I9195	Knox 2.4.x or earlier
	GT-I9197	Knox 2.4.x or earlier
	SCH-I435	Knox 2.4.x or earlier
	SCH-I435L	Knox 2.4.x or earlier
	SCH-R890	Knox 2.4.x or earlier
	SGH-I257	Knox 2.4.x or earlier
	SGH-I257M	Knox 2.4.x or earlier
	SM-S890L	Knox 2.4.x or earlier
	SPH-L520	Knox 2.4.x or earlier

Samsung Galaxy smartphones supporting Knox		
Device	Model Number	Knox Version
Galaxy S4 mini Value Edition	GT-I9192I	Knox 2.4.x or earlier
	GT-I9195I	Knox 2.4.x or earlier
Galaxy S4 Value Edition	GT-I9515	Knox 2.4.x or earlier
	GT-I9515L	Knox 2.4.x or earlier
Galaxy S3	GT-I9305	Knox 2.4.x or earlier
	GT-I9305N	Knox 2.4.x or earlier
	SCH-I535	Knox 2.4.x or earlier
	SCH-L710	Knox 2.4.x or earlier
	SCH-R530	Knox 2.4.x or earlier
	SCH-R530C	Knox 2.4.x or earlier
	SGH-I747	Knox 2.4.x or earlier
	SGH-I747M	Knox 2.4.x or earlier
	SGH-T999	Knox 2.4.x or earlier
	SGH-T999L	Knox 2.4.x or earlier
	SGH-T999V	Knox 2.4.x or earlier
	SPH-L710	Knox 2.4.x or earlier
	SPH-L710T	Knox 2.4.x or earlier
Galaxy S3 LTE	SHV-E210K	Knox 2.4.x or earlier
	SHV-E210L	Knox 2.4.x or earlier
	SHV-E210S	Knox 2.4.x or earlier
Galaxy Xcover 3	SM-G388D	Knox 2.4.x or earlier
	SM-G388F	Knox 2.4.x or earlier
	SM-G389F	Knox 2.6
Galaxy Xcover 4	SM-G390F	Knox 2.7.1
	SM-G390Y	Knox 2.7.1

Samsung Galaxy tablets supporting Knox		
Device	Model Number	Knox Version
Galaxy NotePRO 12.2"	SM-P900	Knox 2.4.x or earlier
	SM-P901	Knox 2.4.x or earlier
	SM-P905	Knox 2.4.x or earlier
	SM-P905F0	Knox 2.4.x or earlier
	SM-P905V	Knox 2.4.x or earlier
	SM-P907A	Knox 2.4.x or earlier
Galaxy Note 10.1 (2014 Edition)	SM-P600	Knox 2.4.x or earlier
	SM-P601	Knox 2.4.x or earlier
	SM-P605	Knox 2.4.x or earlier
	SM-P605K	Knox 2.4.x or earlier
	SM-P605L	Knox 2.4.x or earlier
	SM-P605S	Knox 2.4.x or earlier
	SM-P605V	Knox 2.4.x or earlier
	SM-P607T	Knox 2.4.x or earlier
Galaxy Note 10.1"	SHV-E230K	Knox 2.4.x or earlier
	SHV-E230L	Knox 2.4.x or earlier
	SHV-E230S	Knox 2.4.x or earlier
	SHW-M480K	Knox 2.4.x or earlier
	SHW-M480S	Knox 2.4.x or earlier
	SHW-M480W	Knox 2.4.x or earlier
Galaxy Note 8.0"	GT-N5100	Knox 2.4.x or earlier
	GT-N5110	Knox 2.4.x or earlier
	GT-N5120	Knox 2.4.x or earlier
	SGH-I467	Knox 2.4.x or earlier
	SGH-I467M	Knox 2.4.x or earlier
	SHW-M500W	Knox 2.4.x or earlier
Galaxy Tab 4 10.1"	SM-T530	Knox 2.4.x or earlier
	SM-T530NU	Knox 2.4.x or earlier
	SM-T531	Knox 2.4.x or earlier
	SM-T533	Knox 2.4.x or earlier
	SM-T535	Knox 2.4.x or earlier
	SM-T536	Knox 2.6
	SM-T537A	Knox 2.4.x or earlier
	SM-T537R4	Knox 2.4.x or earlier
	SM-T537V	Knox 2.4.x or earlier
	SM-T330	Knox 2.4.x or earlier
Galaxy Tab 4 8.0"	SM-T330NU	Knox 2.4.x or earlier
	SM-T331	Knox 2.4.x or earlier
	SM-T332	Knox 2.4.x or earlier
	SM-T335	Knox 2.4.x or earlier
	SM-T335K	Knox 2.4.x or earlier
	SM-T335L	Knox 2.4.x or earlier
	SM-T337A	Knox 2.4.x or earlier
	SM-T337T	Knox 2.4.x or earlier
	SM-T337V	Knox 2.4.x or earlier

Samsung Galaxy tablets supporting Knox		
Device	Model Number	Knox Version
Galaxy Tab 4 7.0"	SM-T230NT	Knox 2.4.x or earlier
	SM-T230NW	Knox 2.6
	SM-T235	Knox 2.4.x or earlier
	SM-T237P	Knox 2.4.x or earlier
	SM-T237Z	Knox 2.4.x or earlier
Galaxy Tab 3 Lite 7.0"	SM-T116IR	Knox 2.5.1
Galaxy Tab 3 7.0"	SM-T217A	Knox 2.4.x or earlier
	SM-T217S	Knox 2.4.x or earlier
	SM-T217T	Knox 2.4.x or earlier
Galaxy Tab Active	SM-T360	Knox 2.4.x or earlier
	SM-T365	Knox 2.4.x or earlier
	SM-T365F0	Knox 2.4.x or earlier
	SM-T365Y	Knox 2.4.x or earlier
Galaxy Tab A 10.1"	SM-P580	Knox 2.8
	SM-P583	Knox 2.8
	SM-P585	Knox 2.8
	SM-P585M	Knox 2.8
	SM-P585N0	Knox 2.8
	SM-P585Y	Knox 2.8
	SM-P587	Knox 2.8
	SM-P588C	Knox 2.8
	SM-T580	Knox 2.8
	SM-T585	Knox 2.8
	SM-T585N0	Knox 2.8
	SM-T587P	Knox 2.6
Galaxy Tab A 9.7"	SM-T550	Knox 2.6
	SM-T555	Knox 2.6
	SM-T555C	Knox 2.6
Galaxy Tab A 9.7" (with S-Pen)	SM-P550	Knox 2.6
	SM-P555	Knox 2.6
	SM-P555C	Knox 2.6
	SM-P555K	Knox 2.6
	SM-P555L	Knox 2.6
	SM-P555S	Knox 2.6
Galaxy Tab A 8.0"	SM-T350	Knox 2.6
	SM-T355	Knox 2.6
	SM-T355Y	Knox 2.6
	SM-T357T	Knox 2.4.x or earlier
	SM-T357W	Knox 2.4.x or earlier
Galaxy Tab A 8.0" (with S-Pen)	SM-P350	Knox 2.6
	SM-P355	Knox 2.6
Galaxy Tab E 9.6"	SM-T560NU	Knox 2.6
	SM-T567V	Knox 2.6

Samsung Galaxy tablets supporting Knox		
Device	Model Number	Knox Version
Galaxy Tab E 8.0"	SM-T375L	Knox 2.6
	SM-T375S	Knox 2.6
	SM-T3777	Knox 2.4.x or earlier
	SM-T377A	Knox 2.6
	SM-T377P	Knox 2.6
	SM-T377R4	Knox 2.6
	SM-T377T	Knox 2.6
	SM-T377V	Knox 2.6
	SM-T377W	Knox 2.6
	SM-T378S	Knox 2.6
	SM-T378K	Knox 2.6
	SM-T378L	Knox 2.6
Galaxy TabPRO 12.2"	SM-T900	Knox 2.4.x or earlier
	SM-T905	Knox 2.4.x or earlier
Galaxy TabPRO 10.1"	SM-T520	Knox 2.4.x or earlier
	SM-T525	Knox 2.4.x or earlier
Galaxy TabPRO 8.4"	SM-T320	Knox 2.4.x or earlier
	SM-T321	Knox 2.4.x or earlier
	SM-T325	Knox 2.4.x or earlier
Galaxy Tab S3 9.7"	SM-T820	Knox 2.7.1
	SM-T825	Knox 2.7.1
	SM-T825N0	Knox 2.7.1
	SM-T827	Knox 2.7.1
	SM-T827R4	Knox 2.7.1
	SM-T827V	Knox 2.7.1
Galaxy Tab Q	SM-T2558	Knox 2.4.x or earlier
Galaxy Tab S2 8.0"	SM-T710	Knox 2.7.1
	SM-T713	Knox 2.7.1
	SM-T715	Knox 2.7.1
	SM-T715C	Knox 2.7.1
	SM-T715N0	Knox 2.7.1
	SM-T719	Knox 2.7.1
Galaxy Tab S2 9.7"	SM-T810	Knox 2.7.1
	SM-T813	Knox 2.7.1
	SM-T815	Knox 2.7.1
	SM-T815C	Knox 2.6
	SM-T815N0	Knox 2.7.1
	SM-T815Y	Knox 2.7.1
	SM-T817A	Knox 2.7.1
	SM-T817P	Knox 2.7.1
	SM-T817R4	Knox 2.6
	SM-T817T	Knox 2.7.1
	SM-T817V	Knox 2.7.1
	SM-T817W	Knox 2.7.1
	SM-T818A	Knox 2.7.1
	SM-T818T	Knox 2.6
	SM-T818V	Knox 2.7.1
	SM-T818W	Knox 2.7.1
	SM-T819	Knox 2.7.1

Samsung Galaxy tablets supporting Knox		
Device	Model Number	Knox Version
Galaxy Tab S 10.5"	SM-T800	Knox 2.6
	SM-T805	Knox 2.6
	SM-T805K	Knox 2.6
	SM-T805L	Knox 2.6
	SM-T805S	Knox 2.6
	SM-T805W	Knox 2.4.x or earlier
	SM-T807A	Knox 2.6
	SM-T807J	Knox 2.6
	SM-T807P	Knox 2.6
	SM-T807R4	Knox 2.6
	SM-T807T	Knox 2.4.x or earlier
	SM-T807V	Knox 2.6
Galaxy Tab S 8.4"	SM-T700	Knox 2.6
	SM-T705	Knox 2.6
	SM-T705C	Knox 2.6
	SM-T705W	Knox 2.4.x or earlier
	SM-T707A	Knox 2.6
	SM-T707D	Knox 2.6
	SM-T707V	Knox 2.6
Galaxy View	SM-T670	Knox 2.5.1
	SM-T677V	Knox 2.5.1
Galaxy W	SM-T255S	Knox 2.4.x or earlier